

Bolt on Finishing Edge System

Installation Guide




1 Remove the two outside teeth. (A middle tooth is also required from larger buckets.)

2 Replace bucket teeth with the Bolt on Finishing Edge System receivers.

3 Use the Torque wrench to tighten the plow bolts and hold the Edge in place.

Three things are critical to proper Edge selection.

1. Bucket Width, 2. Number of Teeth on bucket, 3. Tooth Size
(Consult your sizing guide for exact specifications. Larger buckets require a larger edge, more receivers, and more bolts.)

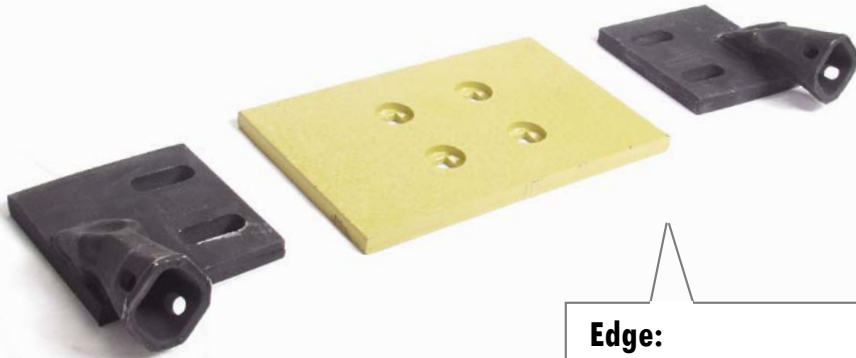

Hardware:
Consists of plow bolts
Fast easy change outs

Edge:
Uses hardened steel (42-45 Rc)
Reversible for double the wear
Maintains a right angle while operating

Receivers:
Allows for quick on/off changes
Custom fit to bucket and tooth system

Tools Needed

- Torque wrench
- 1.125 socket for a backhoe
- 1.5 socket for an excavator
- Hammer
- Pin Master-Talk to your dealer to find out which size you need.